


Beko Washing Machine Instructions

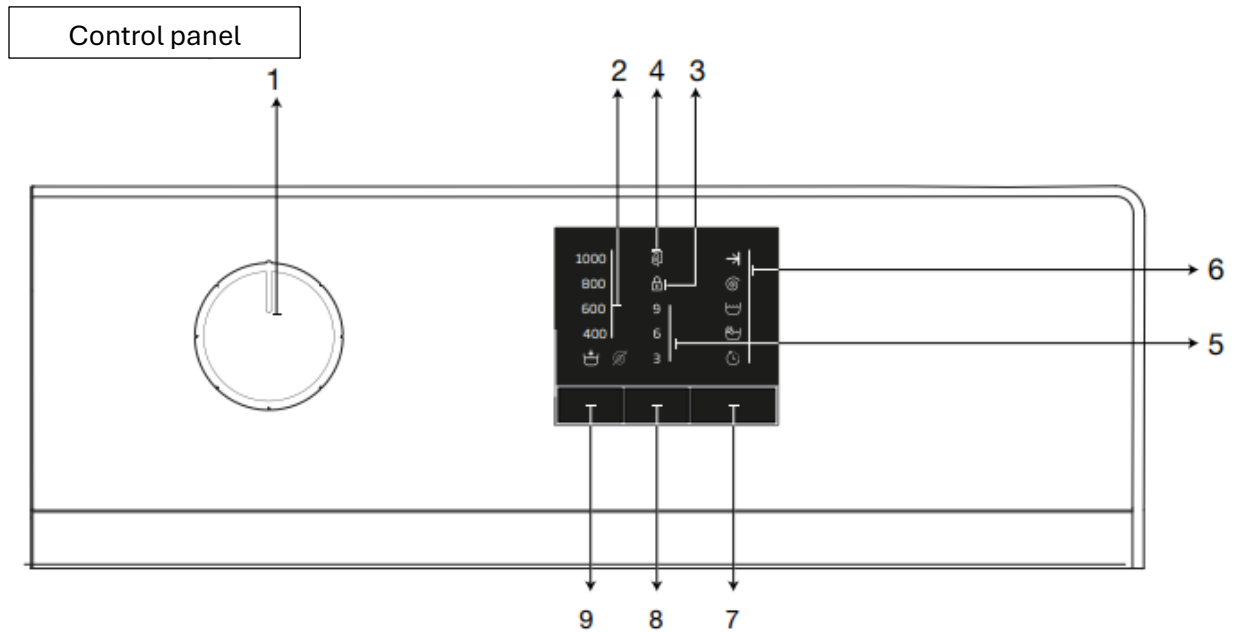

- 1 - Programme Selection knob (Uppermost position On / Off)
- 2 - Spin Speed Indicator LEDs
- 3 - Child Lock Enabled LED
- 4 - Door Lock Enabled LED
- 5 - Delayed Start Indicator LEDs
- 6 - Programme Follow-up LEDs
- 7 - Start / Pause Button
- 8 - Delayed Start Setting Button
- 9 - Spin Speed Adjustment button

1. Load the washing machine with laundry.
2. Place Laundry powder in compartment 2.
3. Close the door.
4. Select your program.
5. Press the start button.

