

# Bosch Dryer Instructions

1. Place Laundry in dryer and close the door.
2. Select your programme using the selector.
3. Press the start button.

If the dryer does not start, please ensure the water container is empty and the fluff filter is clean.

## Preparing for installation, see Page 8

**!** Never start the dryer if it is damaged! Inform your after-sales service.

**Inspecting the dryer**

**!** Make sure your hands are dry. Hold the plug only.

**Connecting the mains plug**

## Sorting and loading laundry



Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading.

See programme overview on page 7. See also separate instructions for "Woollens basket" (depending on model)

## Selecting and adjusting the programme

Select the drying programme ...

... and adapt to individual requirements

Additional functions	Display panel	Programme selector
<p>Low Heat</p>	<ul style="list-style-type: none"> <li>○ Drying</li> <li>○ Iron Dry</li> <li>○ Cupboard Dry</li> <li>○ Anti-Crease/End</li> <li>○ Container</li> <li>○ Clean</li> </ul>	

**i** All buttons are sensitive and only need to be touched lightly.

**Press the Start/Stop button**

**!** Only operate the dryer with the fluff filter inserted!

## Drying



- 1
- 2
- 3

## Drying

Service indicators	Empty the condensation container.
<b>Container Clean</b>	Clean the fluff filter and/or air cooler under running water. → Page 4/6.
<b>Fine adjustment of the drying result</b>	The drying result (e.g. Cupboard Dry) can be adjusted over three levels (1 - max. 3) for the <b>Cottons</b> , <b>Easy-Care</b> and <b>SuperQuick 40'</b> programmes → presetting = 0. After one of these programmes has been finely adjusted, the setting is retained for the others. Further information → Page 5/6.

0, 1, 2, 3