

## Microwave Instructions

---

If you want to cook some food.



Place the food in the oven. Press the **START/+30s** button.

**Result:** Cooking starts. When it has finished.

- 1) The oven beeps 4 times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

If you want to grilling some food



Place the food in the oven. Press the **Grill+30s** button.

**Result:** Grilling starts.


- 1) The oven beeps 4 times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

If you want to add an extra 30 seconds.



1. Press the **START/+30s** button one or more times for each extra 30 seconds that you wish to add.
2. By turning the **Dial Knob**, You can set the time as you want.

## Control panel

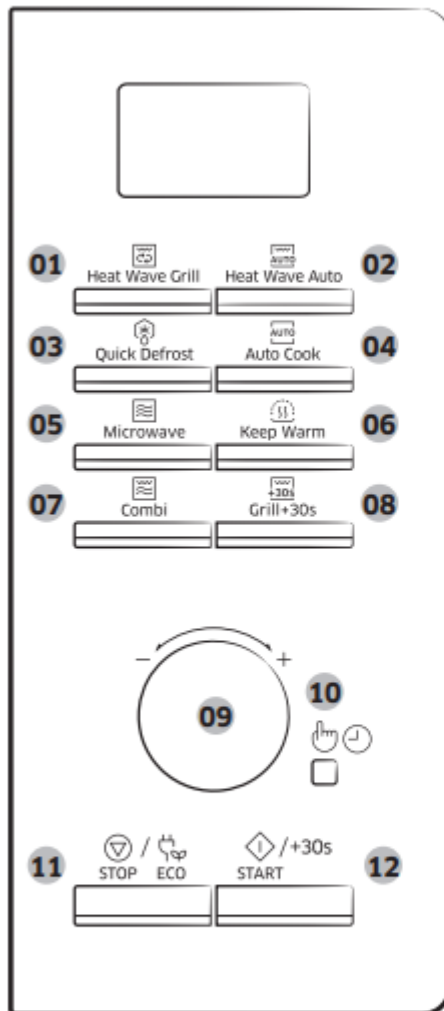

- 01** Heat Wave Grill Button
- 02** Heat Wave Auto Button
- 03** Quick Defrost Button
- 04** Auto Cook Button
- 05** Microwave Button
- 06** Keep Warm Button
- 07** Combi Button
- 08** Grill+30s Button
- 09** Dial Knob (Weight/Serving/Time)
- 10** Select/Clock Button
- 11** Stop/Eco Button
- 12** Start/+30s Button