

Bosch Oven Instructions

Setting the oven

 
There are various ways in which you can set your oven. Here we will explain how you can select the desired type of heating and temperature or grill setting. You can select the oven cooking time and end time for your dish. Please refer to the section on *Setting the time-setting options*.

Switching on the oven

Main oven

Using the function and temperature selector, set a temperature for 3D hot air mode.

Turn the function and temperature selector to the position to set the Defrost setting.

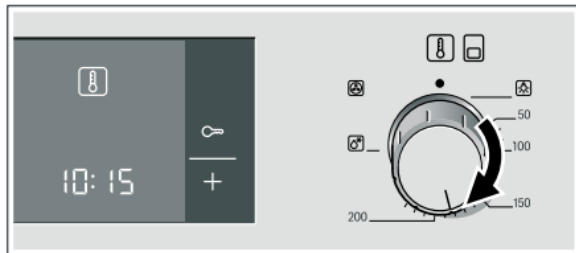


The main oven begins to heat up.


Top oven

Example shown below: Top/bottom heating at 200°C

 1. Use the function selector to set the type of heating.

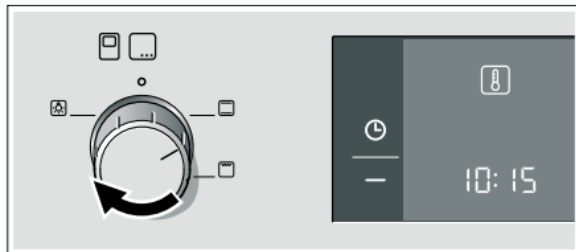

 2. Set the temperature or grill setting using the temperature selector.

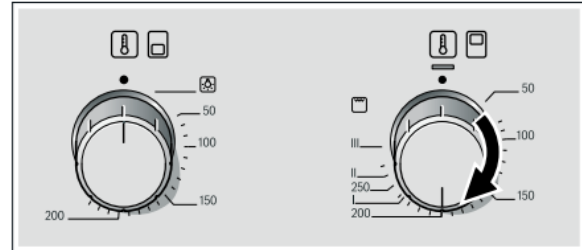

The top oven begins to heat up.

Changing the settings

The type of heating and temperature or grill setting can be changed at any time with their respective selector.

Switching off the oven

Turn the function and temperature selector to the off position.

Childproof lock

The main oven has a childproof lock to prevent children from switching it on by accident or changing a setting.

The main oven does not respond to any settings. You can still set the clock and the timer when the childproof lock is activated.

If the heating type and temperature or grill setting are set for the main oven, the childproof lock interrupts the heater element.

Switching on the childproof lock

No cooking time or end time may be set.

Press and hold the button for approximately 4 seconds.

The symbol appears in the display. The childproof lock is activated.

Switching off the childproof lock

Press and hold the button for approximately 4 seconds.

The symbol in the display goes out. The childproof lock is deactivated.