


Ceramic HOB Instructions

Touch Controls

The touch controls for your hob have been designed to provide you with finger tip control of your hob, providing accurate and repeatable power settings for cooking and an easy clean surface that can be easily wiped over. When a cook zone is activated the power setting is displayed for each zone individually,

Controls layout

- a. Referred Zone (x4)
- b. Minute Minder / Fault code
- c. Upper Left Zone
- d. Lower Right Zone
- e. Minus '-' (Power Level / Time)
- f. Power On/off
- g. Timer
- h. Upper Right Zone
- i. Lower Right Zone
- j. Plus '+' (Power Level / Time)
- k. Lock

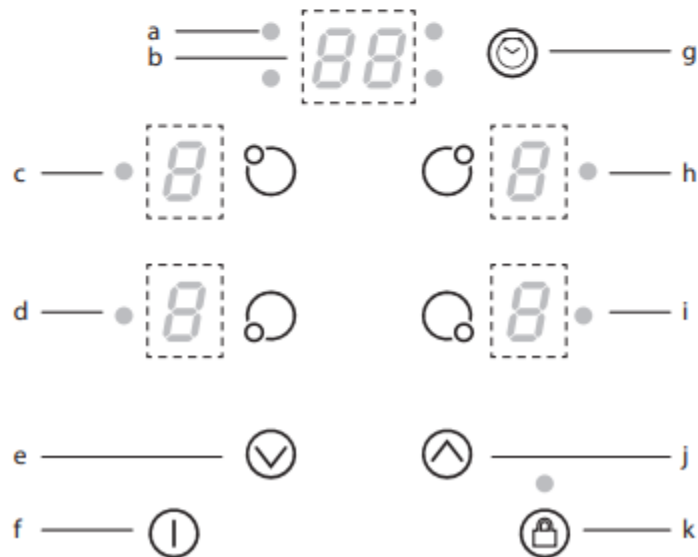

Initial set up

Before switching on the power supply to the appliance, switch off any bright lights (such as cooker hood) and ensure the appliance is not in direct sunlight.

This is to enable the electronic controls to calibrate its sensitivity against natural ambient lighting (approx 30 seconds).

Failure to observe the above will result in the hob not functioning correctly, (Display showing "FL"). To rectify remove all strong lighting sources and re-apply power.

The hob should complete the calibration procedure satisfactorily and lighting such as cooker hoods can be used normally.

Functions

Lock



A Red LED indicates when the key lock is active, to deactivate/activate, touch the Key Lock key for 1 second.

The key lock is deactivated when the Red LED switches off.

If any of the cook zones are ON, the key lock function locks all the keys except the ON/OFF key. If the cook zones are OFF, the key lock function locks all the keys, including the ON/OFF key.

Note: The Key Lock is automatically activated every time the electricity supply is switched off and back on to the hob.

To avoid unintentional switching on of the appliance, e.g. by small children and pets, we recommend activation of the key lock feature.

Switching on the hob

- Touch and hold the on/off symbol for 3 secs. The hob will beep and all energy level indicators will display "0".
- If no other symbol is selected within 10 secs the hob will turn off.

Operating a zone

- Select the desired zone by touching its own symbol. The corresponding display will flash "0". Touch "+" or "-" to set the power level. After 10 secs the display will stop flashing and a beep is heard.
- To adjust the power level, touch the zone symbol until the display flashes. Adjust the "+" or "-" to the desired power level. After 10 secs the display will stop flashing and a beep is heard.

Switching a zone off

- To turn off a zone, touch and hold the desired zone symbol until the display flashes. Adjust the "-" symbol down to "0". After 10 secs the zone will switch off, the display will stop flashing and a beep is heard.
- To turn off all zones together, touch and hold the on/off symbol for 1 sec.

Notes on use

- The power settings on the hob do not indicate any set temperature and cannot be used to judge one element against another.
- During cooking, the elements will cycle on and off. This is normal.

Auto heat-up

- Select the desired zone by touching its own symbol. The corresponding display will flash "0". Touch "+" until 9 is reached then press the "+" again. A dot will appear next to the "9." and they will both start to flash for 10 secs. This indicates that auto heat up is on. During this time the desired power level must be set. After 10 secs a bleep sounds and the dot becomes fixed. The zone will be set at this level.
- If "0" or "9" are selected whilst in auto heat up mode the function is cancelled