


Hoover Tumble Dryer

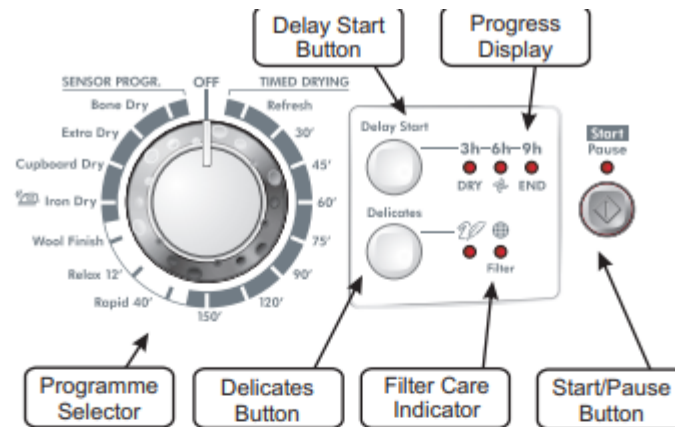


Control Panel and Indicator Lights

Programme Selector – Select the required programme


Delay Start button – Allows the user to delay the start of the drying cycle (see details of Operation on page 10)

Start/Pause button – Press to commence the selected drying programme

Delicates button  – Press to reduce the heat level for delicate items, the indicator above the button will light up. To change the heat setting the programme must be reset


Low Heat – Indicator light **ON**

High Heat – Indicator light **OFF**

Filter Care indicator  – Lights when the filter needs cleaning

Progress display


DRY – When the programme is selected the **DRY** indicator will flash, when the programme starts the **DRY** indicator will light up.

 – Indicator lights when there is a short time left until completion of the programme. At this stage of the drying cycle the machine enters the Cool Down phase.

The length of the Cool Down phase varies between 10 and 15 minutes depending on the programme.

END – Indicator lights when the programme is finished.

SELECTING THE PROGRAMME

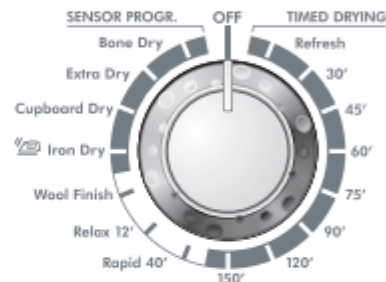

The Sensor Dry machine gives many options for drying the laundry to suit all circumstances. The table on the next page lists the programmes and the function of each programme.

Note: The sensor may not detect a small load of small articles. For small loads and separate items or pre-dried fabrics with low moisture content, use the timed programmes.

Set the programme between 30 and 75 minutes depending on the load size and dryness required, and select high or low heat depending upon the fabric type.

If the sensor does not detect the item the dryer will only operate for 10 minutes before going into cooldown.

If the load is too large or too wet to tumble dry the dryer will automatically go into cooldown after approximately 3 hours.