


## Quick Start Guide

Please carefully read the user Instruction Booklet before operating the washer dryer

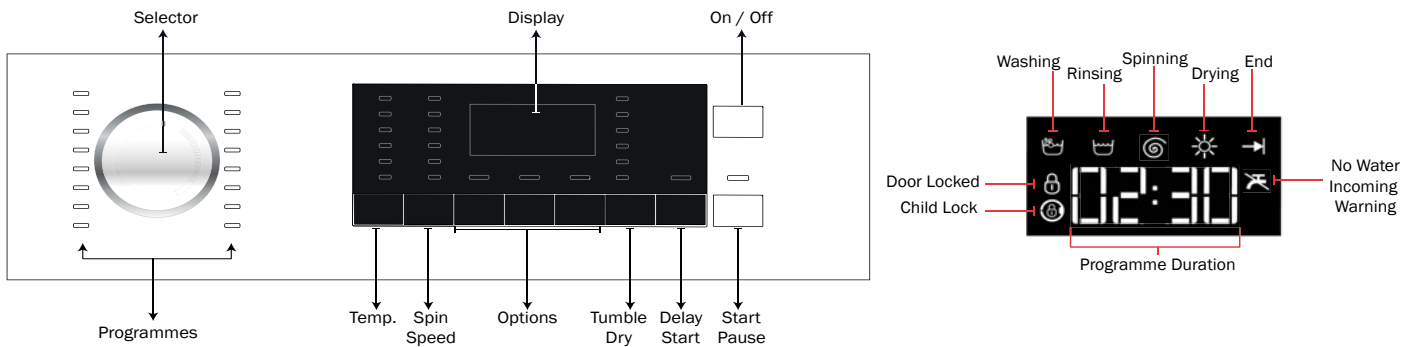

- Sort laundry according to fabric type and colour fastness.
- Turn on machine.
- Loosely load machine (\*half load if tumble dryer cycle to be used) and close door.
- Add detergent / fabric conditioner as desired (do not use liquid detergent if selecting delayed start).
- Select wash programme using rotary dial.
- Adjust temperature / spin and select options etc. as desired.
- Select tumble drying cycle if desired (\*half load only).
- Push start button.

*The door will lock and the machine will begin the programme.*

### To cancel a programme:

Push and hold the start button - machine displays 3-2-1 and then stops.  
(To empty the water from the machine select a spin cycle & press start button).

### At the end of a programme:

The programme end indicator is displayed and an alert sounds when the door lock opens.

(- The display and all indicators will turn off if no button is pressed within 2 mins).

### Hints/Tips


Do not overload the machine with laundry (loosely fill).

Do not use too much detergent (follow instructions on packets).

## Check filter regularly for items

(buttons, coins etc).

A blocked filter can cause the machine to empty or spin.

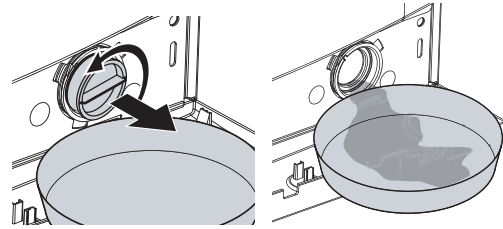

## Programme Charts

### Washing

EN						Auxiliary functions				Selectable temperature range °C
Programme (°C)		Max. Load (kg)	Water Consumption (l)	Energy Consumption (kWh)	Max. Speed***	Prewash	Quicker Wash	Extra Rinse	Drying	
Cottons	90	8	78	2,40	1400	•	•	•	•	90-Cold
	60	8	78	1,50	1400	•	•	•	•	90-Cold
	40	8	78	1,00	1400	•	•	•	•	90-Cold
Cottons Eco	60**	8	47	0,76	1400				•	60-Cold
Synthetics	60	3	67	1,05	1200	•	•	•	•	60-Cold
	40	3	67	0,75	1200	•	•	•	•	60-Cold
Wool	40	1,5	45	0,45	1200			•		40-Cold
Delicates	40	3,5	48	0,50	1000	•				40-Cold
Hand Wash	30	1	35	0,30	1200					30-Cold
Rapid 30°	30	2	32	0,10	1400			•	•	30-Cold
Quick	90	8	54	1,90	1400			•	•	90-Cold
	60	8	54	1,10	1400			•	•	90-Cold
	30	8	50	0,18	1400			•	•	90-Cold
Shirts	60	3,5	45	0,85	800	•	•	•	•	60-Cold

### Drying

EN						Auxiliary functions				Drying level			Selectable temperature range °C	
Programme (°C)		Max. Load (kg)	Water Consumption (l)	Energy Consumption (kWh)	Max. Speed***	Prewash	Quicker Wash	Extra Rinse	Drying	Extra Dry	Cupboard Dry	Iron Dry		Time based drying - minutes
Cotton Dry	-	5	35	2,75	1400				*	•	•	•	•	-
Synthetic Dry	-	3	22	1,70	-				*	•	•	•	•	-
Anti Allergy Wash & Dry	60	2	120	3,80	1400			*	*	•	•	•	•	90-30
5 Kg Wash & Dry	60	5	94	5,00	1400				*	•	•	•	•	60-Cold
Mini Wash & Dry	30	0,5	35	0,60	1000			•	*				•	30-Cold
Mini Wash & Dry	30	1	44	1,00	1000			•	*				•	30-Cold